

# INTERNATIONAL FIREARMS FACTORY

PUMP AGION
SHOTGUN

READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL CAREFULLY BEFORE USING THIS FIREARMS

## THANK YOU FOR CHOOSING A "INTERNATIONAL FIREARMS FACTORY" PRODUCT

#### **SAFETY RULES**

Read very carefully this instruction manual before handing this shotgun.

Observe these rules of safe gun handling.

- 1. Always keep the muzzle pointed in a sate direction. Watch the muzzle at all times: never point a gun, accidentally or intentionally, at any person or anything you do not intend to shook, identify the targel before shooting; do not shoot ad sounds.
- 2. Always treat a gun en if it le loaded-it may bel
- 3. Keep your finger of the trigger while opening the action and at all other times until you are ready to shoot.
- 4. Keep the safety "on" or in the "safe" position at all times until you are ready to fire. Do not rely on your gun safety, the safety on any gun la a mechanical device and la not Imended as a subethan for common sensor de gun handling.
- 5. Learn how your gun function and handles. If you do not thoroughly understand the proper use and care of your gun, seek the advice of someone who is knowledgeable.
- 6. Do not allar or modify any part of the fream.
- 7. Store guns unloaded, espande from any ammunition, and out of the reach of children.

#### **SAFETY RULES**

- 6. Be sure the barel le clear of any obstructions before loading. Make it a hubli ko chack the barel avery time before loading.
- 7. Wear protective shooting glasses and adequate ear protection when shooting.
- 8. Never climb or jump over anything, such an a tree, fence, or ditch, with a loaded gun. Open the barel, remove the shells and hand the gun to someone else or place it on the ground on the other side of the obalade before crowding it yourself. Do not lean a gun against a tree or other object; it could fall and pombly discharge.
- 12. Do not shooted a hard surface or at weder. Bullet and shat can ricochet or bounce of and travel in unpredictable directions with great velocity.
- 13. Never transport loaded gun. Do not place a loaded gun into vehicle. The gun should be unloaded and placed into a case when not in use.
- 14. Never drink alcoholic beverages before or during shooling.

#### **ABOUT YOUR PUMP ACTION SHOTGUN**

Your shotgun la manually operated. Once a shell has been fired, the locking lug in the bolt moves down, unlocking the gun. The forearm can then be moved to the rear and forward gain, ejecting and loading a new shell

To open the bolt without firing the gun, depress the soon bar look, located just beside and forward of the trigger. This allows for opening the action without dry firing.


#### SAFETY SWITCH OR BUTTON

The safety la dosigned to stop the trigger mechanism.

DON'T RELY ON YOUR GUN'S SAFETY. TREAT EVERY GUN AS IF IT WERE LOADED AND READY TO FIRE. The ety on any gun la mechanical device, and it la not intended as a substitute for common sense or side gun handling. Always keep the muzzle pointed in a safe direction.

The safety is located behind the trigger, and provides protection against dental or unimentional discharge under normal usage when property used.

To engage the ecdety, push the button so that it protrudes from the right side of the gun and the RED BAND MARKING CAN NOT BE SEEN. The safely should always be in the "on" or "safe" position until you intend to fire the gun.

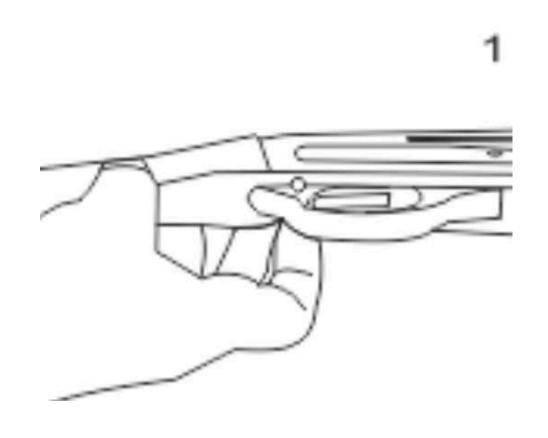


When you are ready to fire the gun, press the safely bution to the "off" postion so that the safety protrudes from the left side of the gun and the RED BAND MARKING

DANGER: The gun will fire when the trigger is pulled Intentionally or accidentally when the RED BAND MARKING IS SHOWING.

#### **AMENDLY**

- 1. Remove the magazine cap.
- 2. Press upward on the action berlock. Pull the forearm approximately half way reward.
- 3. Hold the barel ahead of the barel guide ring (Bee picture 2).

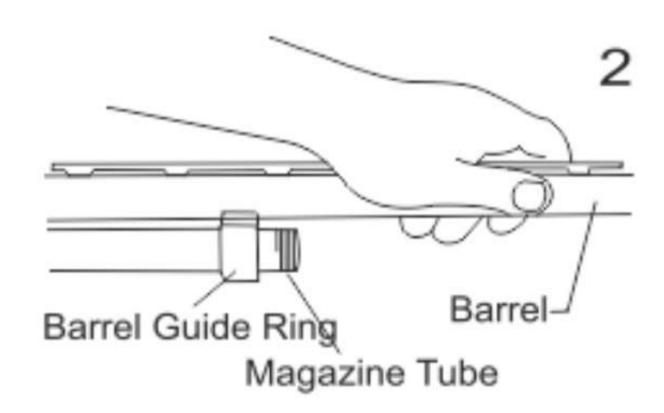

Slide the barel guide ring over the magazine tube. Clean the berral following the

#### **Instructions on Page**

Pre upward on the moon bar look.

Align the ejector on the Inside of the barel with the slot in the bolt.


Carefully set the barel into the receiver. DO NOT FORCE IT! Replace the magazine cap. Tighten.

#### **DISASSEMBLY**

- 1. Make sure the gun is unloaded!
- 2. Point fream in a direction
- 3. Push up on the action bar lock
- 4. Side forearm forward half way.
- 6. Unscrow and remove the magazine cap.
- 6. Pull the barel fully out of the receiver.
- 7. Push the carier forward
- 6.Prese and hold the action bar lock.
- 9. Slide the forearm forward and of the magazine tube

#### **LOADING YOUR SHOTGUN**

- 1. Put salty in the "on" position.
- 2. Point the gun indirection.
- 3. Push up on the action bar lock.
- 4. Pull the forearm completely to the rear and carefully hold it for the return spring modale
- 5. Pul one shell through the ejection port, making sure it la the corect gauge and length.

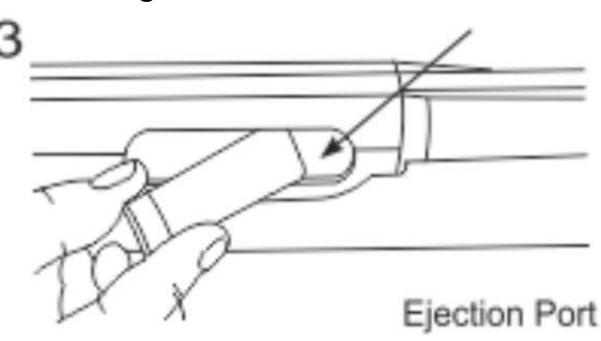


#### **FULLY LOADING YOUR SHOTGUN**

- 1. Put safety in the "on" position.
- 2. Point the gun in a safe direction.
- 3. Push up cit the actin berlark. completely to this mour and curfully fold it for the rebum maing modde
- 5. Put one shell through the ejection port, making sure it is the correct gango and length.
- 6. Push the forum forward and close the action.
- 7. Push a shell upward against the botom of the carrier.
- 6. Push two (2) to four (4) shells, one at a time, fully forward into the magazine tube.

FOR THE MODELS WITH RETURN SPALING IN THE FOHEND, YOU DO NOT NEED TO PUSH THE FOREARM TO CLOSE THE ACTION, THIS WILL HB DONE AUTOMATICALLY, BY THE HELP OF THE SPRING. THE SPRING WILL CLOSE THE ACTION AT A VERY FAST RATE, UŞE CAUTION AND WATCH OUT FOR YOUR FINGERS AND LOOSE CLOTHING.



## UMAGE OF CHOKI TURIS DE YOUR PHOTOUN INCLUDES

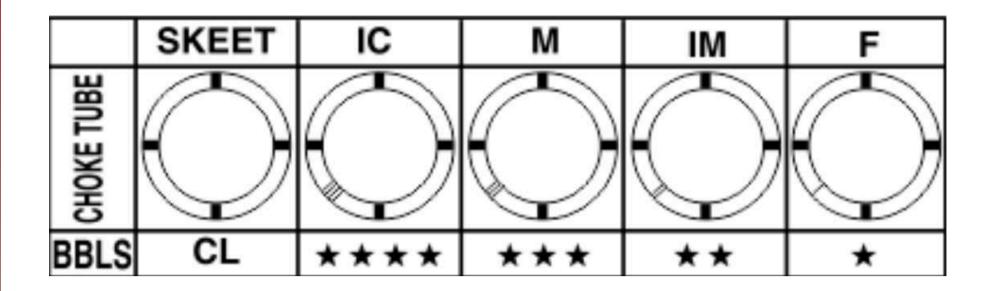

The choke controls how open or tight the patern of the shot will be. The chert below liste the chokes avallable (from open to ligh), and the core spending marks the indicate the specific choke. Never fire your gun or run deaning tools through a beal that uses a choke tube without having a choke Installed. The threads of the choke tube and the internal threads of the barel should be cleaned efter each use and before installation of the tube.

To Install a tube, In the tube into the top of the barel and tighten with your fingers. Once the tube la finger tightened, tighten the rest of the way with the appropriate choke tube wrench until the tube la snug. DO NOT overtighten or forcefully tighten with the wrench.

#### **MPORTANT - USAGE OF STEEL SHOT**

The choke (before constriction) in all modem shotguns have been established based on the patem performance of shat shells loaded with lead shot. When using steel shotshells, you will notice a different performance in partem deneity versus the stablished lead shot patem, because the steel shot is harder and lighter than load shot.

You should be aware of the following differences and cautions: Never shoot eteel shot loade in a full halad barel or an improved modified choked barrel Doing so, may anume the barel in well or rupture. In general, sal shot fired with modified chokes will produce the equivalent of a lead full cholas petem. This will be true of all steel shot sized up to and including no. 2. The established improved cylinder chokes will produce the equivalent of a (lead) modified petiem. All steel shot sized larger than no. 2, and Including specialized such as F. T, etc., should be used only with Improved cylinder chokes. These steel shot sizes, when used in in Improved cylinder choke, will produce equivalent to (leed) full choke patiems. The established cylinder choke or bore will produce the equivalent of a modified (lead) patiem. Additional Information conceming the use of steel shot la mallable from the immunition companies.

#### **NICE AND CLEANING**

- 1. Make sure the broad, polished finely fited maling surface of the breech block and receiver le sepecially clean and lightly olled with high quality gun oll. Do not use allicone or Mancin (Do not usa WD-10).
- 2. Run an all petch through the bore with a cleaning rod atting from the breech and. To prevent leading, use a cleaning solvent and brass brush to clean the bore periodically. Follow this lining with one or two lean oll patches. Important your gun la quipped with choka tubes, do not usa brass brush to clean the bermals without having a phola tube Installed. Barrels the utilize choke tuben must also have the chokes tubes removed to clean and all the threade Inside the barel and the choke tubes themselves. This will protect the threads and prevent dirt build up that can cause tubes to become clicult to remove.

Never fire your gun without choise tubes enuggly tightened in barel. Do not overlighten choke tubes. Wipe all exposed metal surfaces with an oiled cloth before storing. Do not squirt or pour oil into the inside mechanism because it may hamper proper functioning. Aher extended periods of heavy use, your gun should be taken to a qualified gunsmith to have the action disassembled for professional leaning and lubrication.


#### **STORAGE**

Clean thoroughly and all your gun before storage. Store the gun in a case to prevent ecretches and demie. Store your firearm in a dry place to prevent corrosion. Store the gun towary from children and in a place where it cannot be obtained by those unauthorized to use it. Almaya store gun unloaded and sepandely from any ammunition.

#### **THANK YOU**

Thank you for purchasing a IFF shotgun. We are sure this gun will bring you ywam of hunting and/or shooting pleasure. Your satisfaction le the key to our success. Plese let us know if we can be of service and relay any observations about your guns performance or appearance.

### **EXPLODED VIEW**

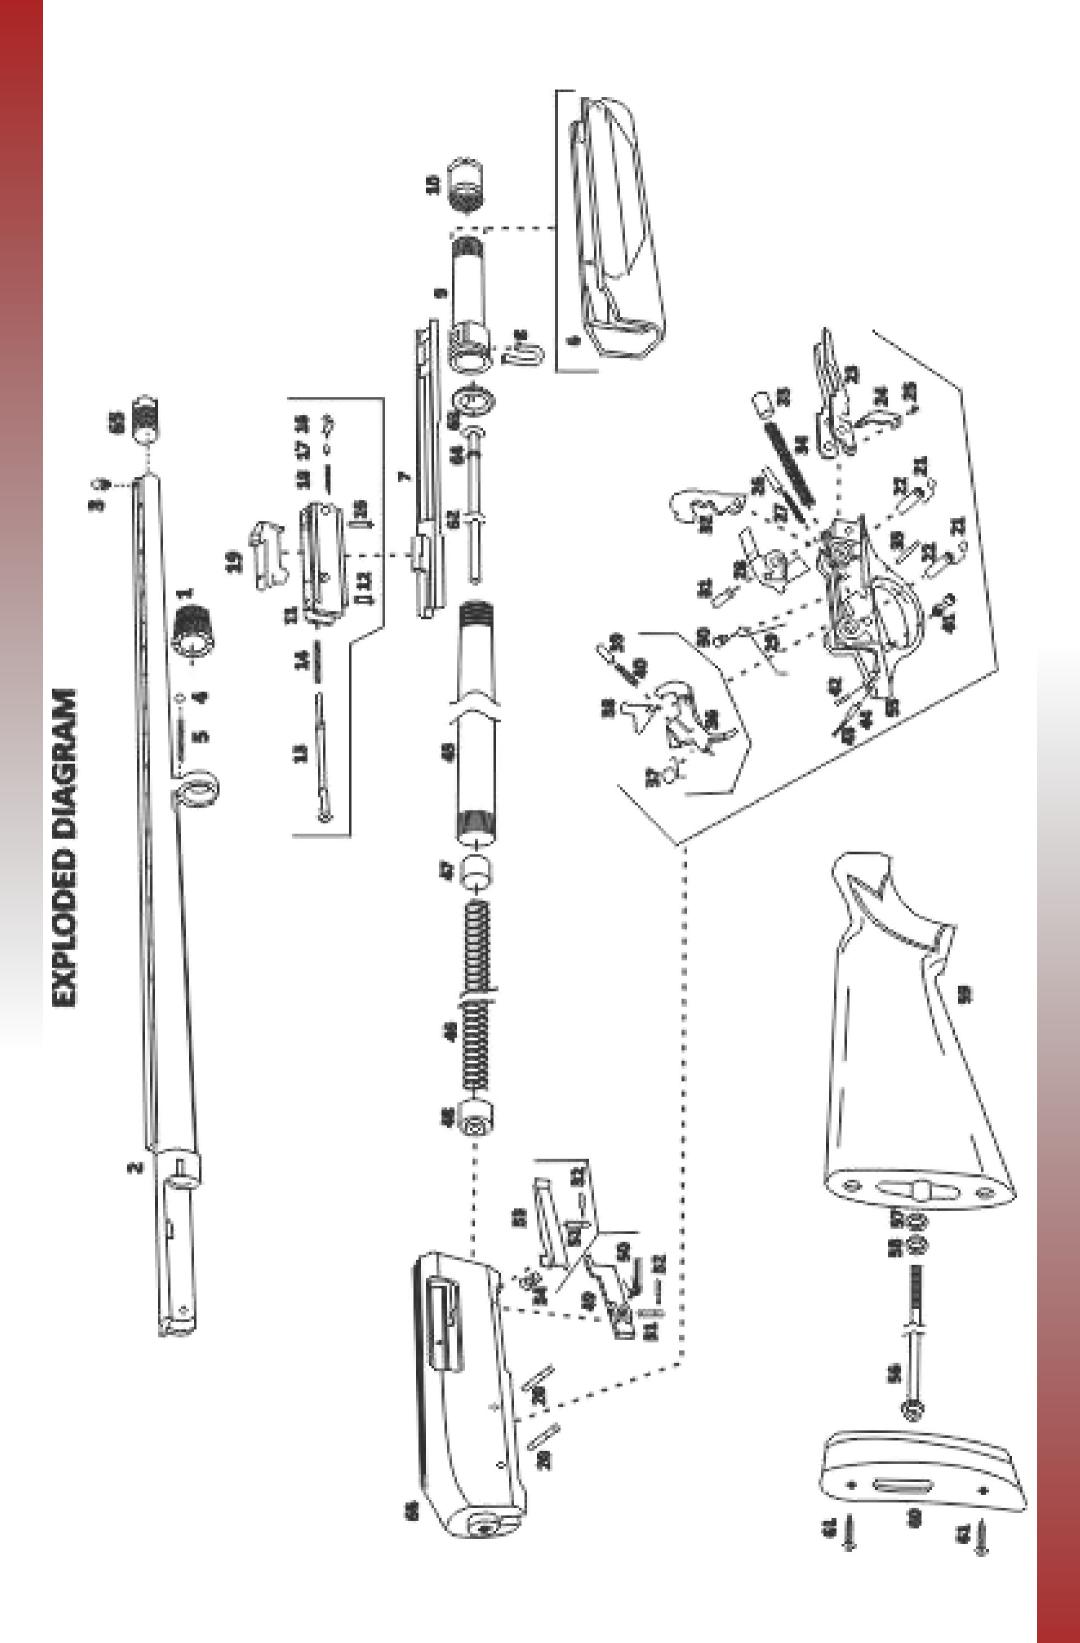

### **PART LIST**

1)	Magazine cap	34)	Spring, hammer
2)	Barrel	35)	Pin, trigger pivot
3)	Front bead	36)	Trigger
4)	Detent, magazine cap	37)	Spring, trigger
5)	Spring, magazine cap detent	38)	Sear
6)	Forearm	39)	Cap, sear spring
7)	Slide arm	40)	Spring, sear
8)	Clip, slide arm retainer	41)	Safety
9)	Forearm tube	42)	Detent, safety
10)	Nut, forearm tube	43)	Spring, safety detent
11)	Bolt body	44)	Pin, safety spring retaining
12)	Pin, firing pin retaining	45)	Magazine tube
13)	Firing pln	46)	Spring, magazine
14)	Spring, firing pin	47)	Magazine spring retainer
15)	Pin, extractor retaining	48)	Magazine spring follower
16)	Extractor	49)	Feed latch
17)	Plunger, extractor	50)	Spring, feed latch
18)	Spring, extractor	51)	Pin, latch pivot (2)
19)	Locking block	52)	Retainer, latch pivot (2)
20)	Pin, trigger frame (2)	53)	Shell stop
21)	"D" ring, trigger frame pin 2	54)	Spring, shell stop
22)	Tube, trigger frame pin (2)	55)	Trigger guard housing
23)	Lifter	56)	Bolt, stock
24)	Lifter dog	57)	Washer, flat stock bolt
25)	Pin, lifter dog	58)	Washer, lock stock bolt
26)	Cap, lifter dog spring	59)	Stock
27)	Spring, lifter dog	60)	Recoil pad
28)	Slide lock lever	61)	Screw, recoil pad (2)
29)	Spring, slide lock lever	62)	Magazine blocker
30)	Stud, slide lock lever spring	63)	Retainer, magazine blocker
31)	Pin, hammer pivot	64)	"E" clip, magazine blocker
32)	Hammer	65)	Choke tube
33)	Cap, hammer spring		



# INTERNATIONAL FIREARMS FACTORY

International Firearms Factory Üzümlü Mh. 44829.Sk. No:5/A Beyşehir - Konya / TURKEY

WEB: https://internationalfirearmsfactory.com/

E-MAİL: export@internationalfirearmsfactory.com